

# HORLOGE ASC3



- A-C..... Start lights (red, yellow and green)  
D .....Bib (Start Number) - yellow  
E .....Countdown Time - red  
F..... Time of day with hours, minutes and seconds - green

- 1.....Green push button  
2..... Yellow push button  
3.....Program push button  
4.....Start input (e.g. startgate for skiing) with green and black banana socket  
5.....Connector for push button for start interval setting and countdown start  
6.....Start output with banana sockets  
7.....Multiport  
8..... Volume for speaker  
9.....Socket to connect an external speaker  
10.....Battery condition and charging LEDs  
11.....On / Off – switch  
12.....External 12V power connection (12 – 15 VDC)  
13.....Fuse 1.0 A for power supply  
14.....Mains connector to recharge internal battery of built in power pack (100-240VAC)

## MISE A L'HEURE avec le GPS

### 1. Brancher le GPS

2. Appuyer sur le bouton **On/Off**

3. « **Store Yes** » est affiché

4. Appuyer sur le bouton **JAUNE PB2**

5. « **SCAN GPS** » est affiché

6. Lorsque l'horloge est à l'heure, **retirer le GPS**

7. « **Program 04** » est affiché

8. Appuyer sur le bouton **JAUNE PB2**